




Product Specification

2.0ml
NOVA Box Vape

EmPower Your Oil & Brand to be the BEST.

Customized Device Settings for the BEST Oil
Performance with Device Counterfeit Authentication.

1. Dimension (Picture and Description)

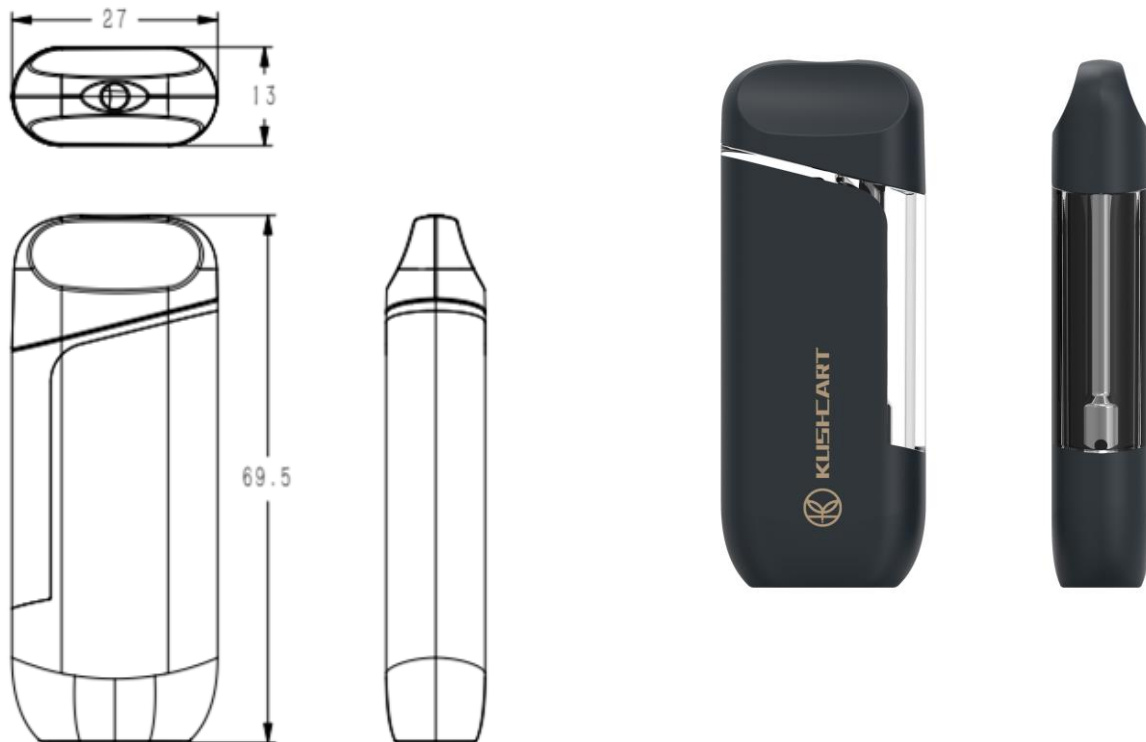

Dimension: 69.5 x 27 x 13mm

Appearance: There are no scratches, cracks, stains, uneven colors, unclear logos, and fades on the appearance of this product.

2. Features

- Inhaled Activated
- Hcore® Ceramic Heating Core
- Compact Body
- SUS316L Center Post
- Pure Flavor, Large Clouds
- High Cost-Performance
- Rechargeable Battery
- Touch Sensor & Operation
 - 4 taps to activate preheat mode
 - 1 tap to end preheat mode

Kushcart NOVA Box Vape

➤ Short Circuit Protection

Short circuit protection is triggered when the device is enabled. LED indicator flashes 3 times.

➤ Overload Protection

Overload protection is triggered when the current rises above a limit. LED indicator flashes 3 times.

➤ Timeout Protection

The device will stop working in case of exceeding 10 seconds. LED indicator flashes 2 times.

➤ Accidental Touch Protection

If the device is activated multiple times in a short period, accidental activation protection will be triggered. (The protection duration will be doubled for every trigger, with a maximum duration of 18.2 hours and an initial value of 30 seconds.) LED indicator keeps flashing.

➤ Charging

LED indicator flashes 10 times when the battery is too low, and there will be no response when the battery has completely run out.

LED indicator fades in and out when charging and stays on when fully charged.

➤ Battery Level Display

Tap the bottom Type-C port lightly to check the battery level:

Green = 100%-60%, Yellow = 59%-20%, Red = Below 20%

3. Main Technical Parameter

Item	Parameter
Dimensions	69.5 x 27 x 13mm
Weight	22g
Volume	2.0ml
Coil Type	Ceramic
Mouthpiece Material	PC
Tank Type	PCTG
Center Post	SUS316
Aperture Inlet	4 x Φ 1.6mm

Kushcart NOVA Box Vape

Resistance	1.4Ω
Activation	Draw/Puff Activated
Preheat Mode	4 Taps on the USB Port
Battery Capacity	260mAh
Battery Tube	PC
Output Voltage	3.5V
Charging Voltage	4.5-5.5V
Charge Port	Type-C
Storage Temperature	23 ± 5 °C
Working Temperature	-10 °C ~ +50 °C

4. How to Use

- To activate the Preheat Mode, tap on the USB port 4 times rapidly. The breathing LED indicator fades in and out and runs at a low voltage of 1.8V. Preheat mode will last for 15 seconds. Users can start inhalation at any time during preheating or tap 1 time to end the preheat mode.

5. Filling Guide

1. Fill the tank with your cannabis oil.

Gently put the syringe between the airway and the outer wall of the oil tank and fill the tank with oil at a proper speed.

- ▲ *Do not allow oil to enter the center airway!*
- ▲ *Do not top off the tank with oil.*
- ▲ *While filling oil, avoid dropping oil onto the shell to prevent chemical reactions. If so, please wipe it off immediately.*

2. Press on the mouthpiece immediately after filling!

- ▲ *Failure to insert the mouthpiece immediately after filling may cause leakage.*
- ▲ *We highly recommend using a capping machine or hand punch to press the mouthpiece.*

6. Storage

1. The storage temperature is $23\pm 5^{\circ}\text{C}$ and the humidity is $50\pm 10\%$ RH.
2. Place in a cool, dark and ventilated place.
3. Keep the disposable sealed storage and avoid direct sunlight.

7. Notification

1. Pay attention to the shelf life of filled oil.
2. Please fully charge the device before use.
3. Please keep the product out of the reach of children after use.