



## 2.0ml Cartridge KC-C10

### FEATURE


- Ceramic Heating Core
- Medical-grade SUS316 Center Post
- Pure Flavor, Large Clouds
- Open-Top Tank Design
- Two Mouthpiece Options:
  - Flat PC Mouthpiece/ Snap-on Design Round Ceramic Mouthpiece

### Cartridge Structure

#### Stainless steel Center Post

Corrosion-resistant,  
High-temperature resistant,  
heavy metals-free

#### 2ml Giga Glass Tank

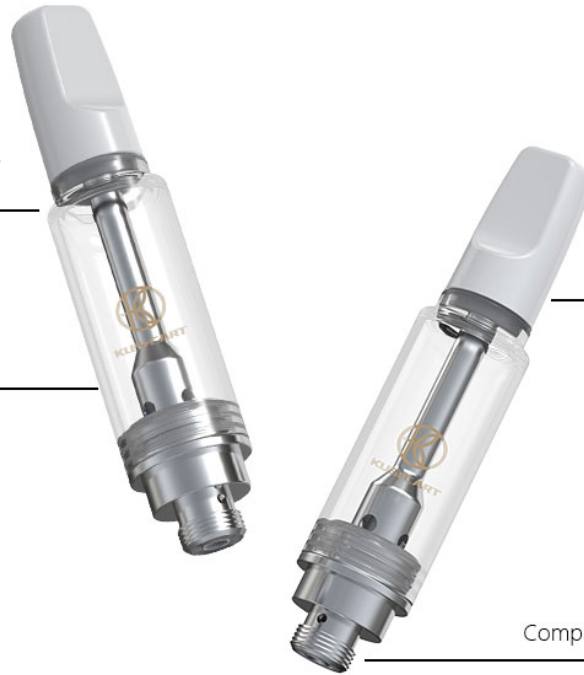

#### Multiple Mouthpiece Options

Material, shape,  
Capping method

#### 510 Thread

Compatible with any 510 battery

### Branding Customization



**Specification**

Item	Parameter
Volume	2.0ml
Resistance	1.4 $\Omega$
Aperture Inlet	4 x $\phi$ 2.0mm
Dimension	$\phi$ 13.0 $\times$ 60mm $\phi$ 13.0 $\times$ 57mm
Weight	10.6g
Heating Core Material	Ceramic
Tank Material	Glass
Mouthpiece Material	Round Ceramic Mouthpiece/ Flat PC Mouthpiece
Center Post	SUS316
Thread	510
Outer Thread Material	Copper
Storage Temperature	23 $\pm$ 5 $^{\circ}$ C

**Filling Guide****1. Fill the tank with your cannabis oil.**

Insert the syringe blunt tip needle into the space between the airway tube and the inner wall of the cartridge body.

**▲ Do not overfill or allow oil to enter the center airway!**

**2. Capping the Cartridge**

**Immediately after filling, insert and press-fit the mouthpiece until it is fully seated.**

**▲ Failure to insert the mouthpiece immediately after filling may cause leakage.**

**▲ We highly recommend using a capping machine or hand punch to press the mouthpiece.**

**Notes**

1. Pay attention to the shelf life of filled oil.
2. Handle the glass cartridge with care. Do not crush or throw the cartridge.

**Storage**

1. The storage temperature is  $23 \pm 5^{\circ}\text{C}$  and the humidity  $50 \pm 10\% \text{ RH}$ .
2. Place in a cool, dark and ventilated place.
3. Keep the oil-filled cartridge sealed storage and avoid direct sunlight.
4. The storage period should not be too long, so as not to exceed the shelf life of oil.