




AIO Pen Vape

1.0ml

EmPower Your Oil & Brand to be the BEST.

Customized Device Settings for the BEST Oil Performance with Device Counterfeit Authentication.
















Dimension (Picture and Description)

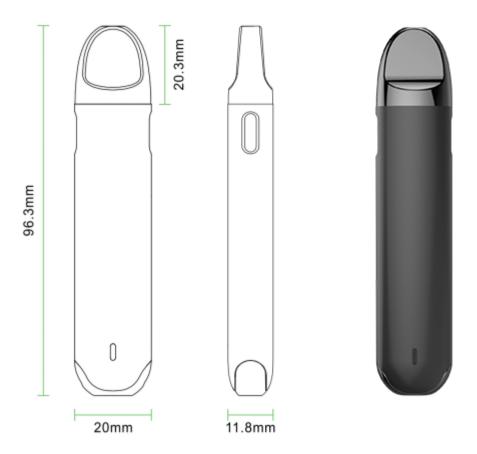

Features


- **Inhaled Activated**
- **Rechargeable Battery**
- PC Housing and PCTG Tank
- **Heating Core Technology**



















Main Technical Parameter

Item	Parameter
Dimension	96.3 x 20 x 11.8(mm)
Weight	18.9g
Tank Volume	1.0ml
Resistance	1.2Ω
Aperture Size	1.6mm
Aperture Number	4
Battery Capacity	300mAh
Heating Core Material	Ceramic
Tank Material	PCTG
Center Post	SS
Output Voltage	3.5V
Charging Voltage	4.5-6V
Battery Life	300 Cycles
Storage Temperature	23°C±5°C
Working Temperature	-10℃~+50℃
Timeout Protection	Flash Twice
Short Circuit Protection	Stay on for 2 Seconds
Low Voltage Protection	Flash 10 Times









How to Use

Inhale activated.

Filling Guide

1. Fill the tank with your cannabis oil.

Gently put the syringe between the airway and the outer wall of the oil tank and fill the tank with oil at a proper speed.



- Do not allow oil to enter the center airway!
- Do not top off the tank with oil.
- While filling oil, avoid dropping oil onto the shell to prevent chemical reactions. If so, please wipe it off immediately.
- 2. Press the mouthpiece into tank with a special jig within 3 minutes.
- Do not inject the oil into the airway!
- Do not top off the tank with oil.
- While filling oil, avoid dropping oil onto the PC shell to prevent chemical reactions. If so, please wipe it off immediately.

Storage

- 1. The storage temperature is $23\pm5^{\circ}$ C and the humidity is $50\pm10\%$ RH.
- 2. Place in a cool, dark and ventilated place.
- 3. Keep the disposable sealed storage and avoid direct sunlight.
- 4. The storage period should not be too long, so as not to exceed the shelf life of oil.

Notification

- 1. Pay attention to the shelf life of filled oil.
- 2. Handle the product with care. Do not throw, or twist the product.





Tel: 1 (720) 303-6806660

